

CONTENTS: (Includes 1 extra set of fasteners)

- (1) Chimney Pot w/ detached Rain Cap/Spark Arrestor
- (10) Screws for securing Weather Shield
- (9) Slotted Mounting Brackets
- (9) Nylon Lock Nuts
- (9) Carriage Bolts
- (9) Washers
- (9) 2" Square Vinyl Flashing Gaskets

KING Installation Instructions

for standard fireplace & DM chimney systems

You must check with your local building code agency before you begin installation to ensure compliance with local codes, including the need for permits & follow-up inspections.

CAUTION

Sharp Edges


- Wear protective gloves, head gear, and safety glasses during installation.

WARNING

Fire Risk

- Intended for use with a metal (or masonry) chase top.

Use of combustible materials will cause a fire hazard.

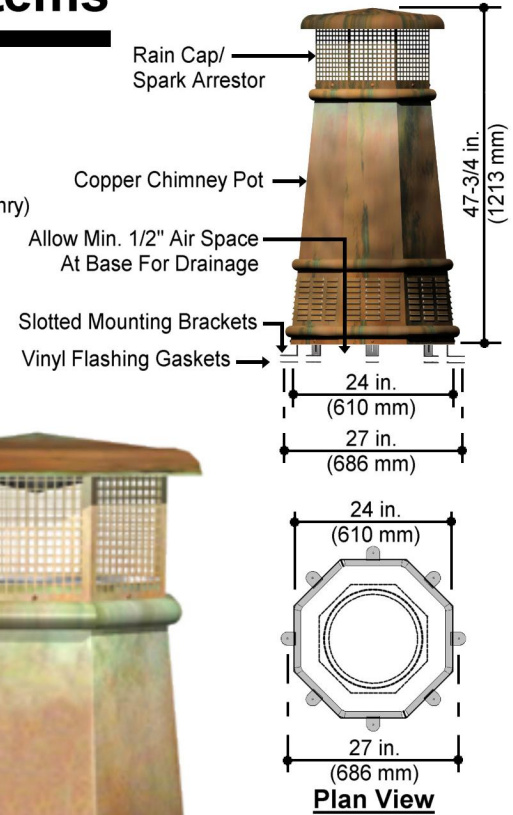


- Step 1**
- Attach rain cap/spark arrestor to chimney pot using all (9) screws as illustrated. (Note: on some models, the rain cap/spark arrestor comes pre-installed.)
- Step 2**
- Attach all (8) mounting brackets to chimney pot base w/ carriage bolts, washers, & lock nuts. (See step 3 for tightening & leveling instructions)

NOTE:

- The mounting surface should be in good condition before installation begins.
- The mounting brackets are designed to allow for drainage. Mount chimney pot min. 1/2" from surface. **DO NOT** add grout or sealant around base of chimney pot.

- Step 3**
- Position chimney pot over vent, make sure pot is centered.
 - Level chimney pot by adjusting brackets as necessary.
 - When chimney pot is level, tighten nuts to secure brackets in place.
 - Mark bracket hole locations on chase top.
 - Remove chimney pot & drill holes in marked locations.
 - Set flashing gaskets over each drilled hole w/ vinyl side UP.
 - Set chimney pot in place w/ brackets on gaskets.
 - Anchor pot to chase top w/ correct fasteners (see attached list)
 - Fasteners will puncture vinyl flashing gaskets.
 - Tighten each fastener securely in place.
 - Caulk all fasteners connecting chimney pot to top of chimney.
 - Periodic re-caulking may be needed to prevent leaks from developing.

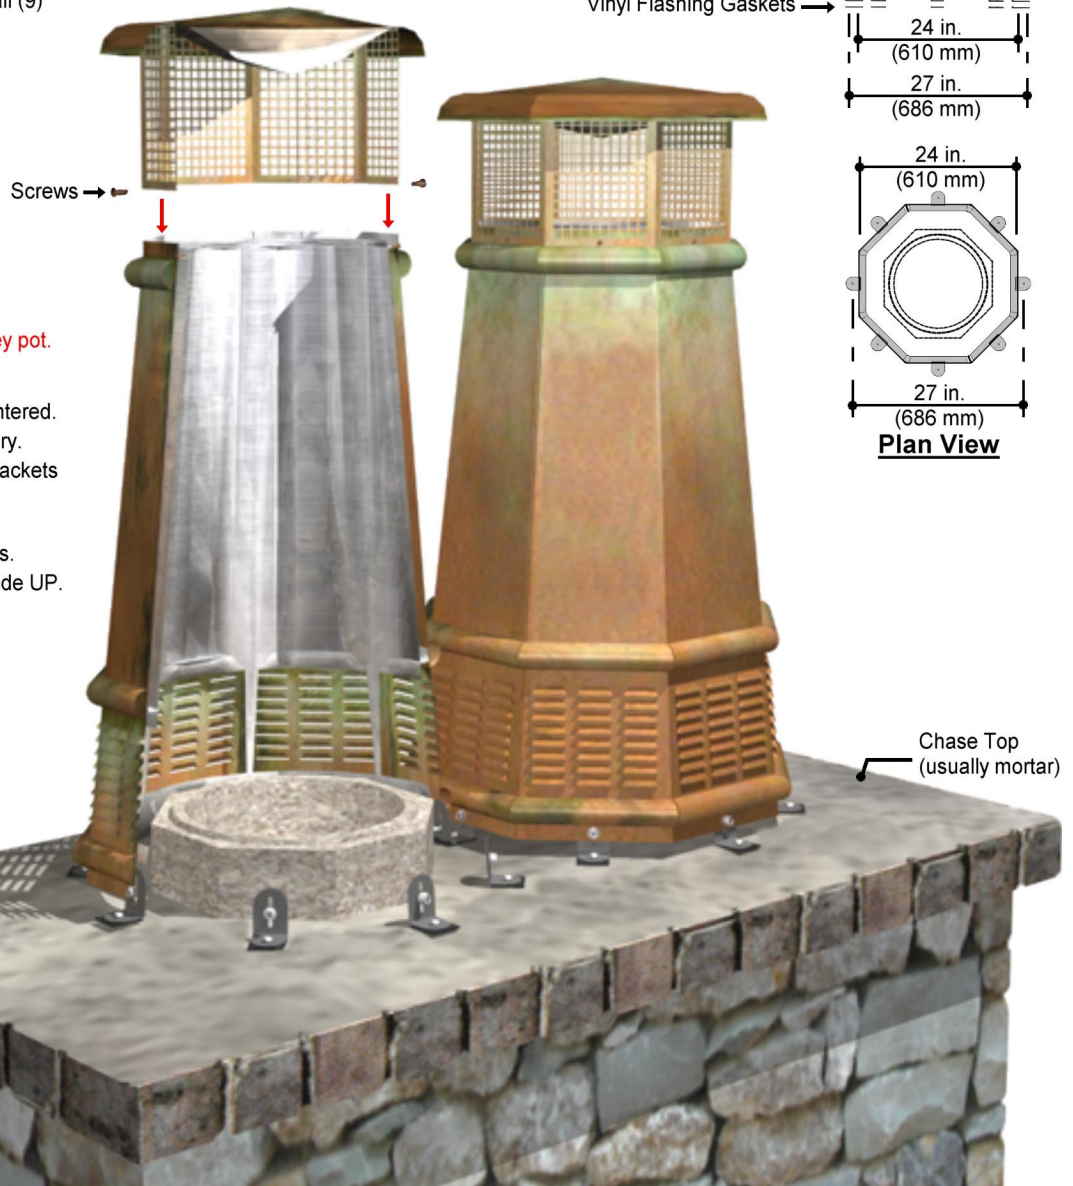

RECOMMENDED FASTENERS

CHIMNEY TOP	FASTENER
MASONRY	1/4" Stainless steel concrete wedge anchor or metal hit anchor
SHEET METAL	1/4" Stainless steel toggle bolt

Anchors to resist a withdrawal force of 580# max.

View at chimney top



Use all safety precautions when installing chimney pots (i.e. Scaffolding, power lifts, harness, etc.) Ladders only are not recommended.